


6 Connect the water supply

All fittings are supplied apart from the isolation valve.

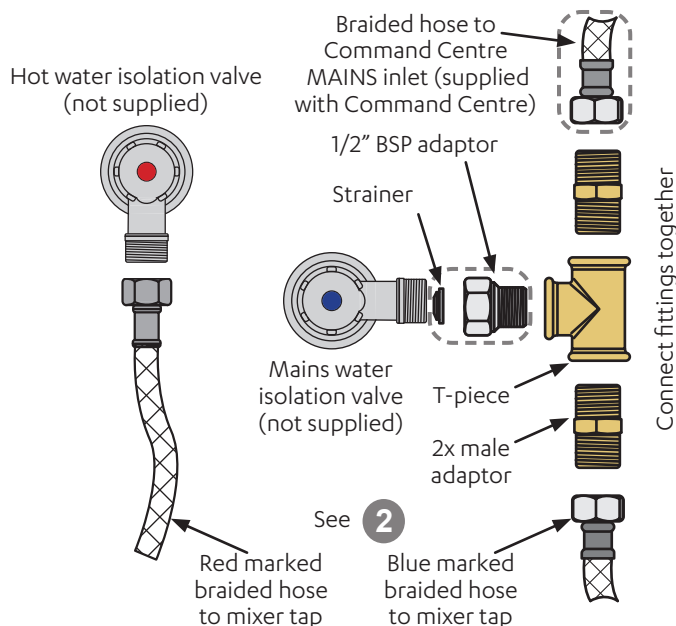

Valves and fittings must be sealed with PTFE tape.



7 Command Centre connections

Mains In	Mains potable water supply.
USB	Connected to the Tap.
Boiling out	Red silicone tube from tap. Cut to length.
Chilled out	(CS) Blue JG pipe from tap. Cut to length.
Vent	Clear silicone tube from tap. Cut to length.
Sparkling out	(CS) White JG pipe from tap. Cut to length.

8 Cleaning and general maintenance

Wipe surfaces with a damp cloth and then wipe dry with a clean, dry cloth. Do not use disinfectant sprays without wiping dry afterwards.

Installation instructions

Zip HydroTap

Celsius Arc & Celsius Cube
B, CS



Zip Water (Aust) Pty Ltd
ABN 46 000 578 727


67 - 77 Allingham Street, Condell Park, NSW 2200
Postal: Locked Bag 80, Bankstown 1885, Australia
(+612) 9796 3100 | Free Call (Aust): 1800 947 827

www.zipwater.com


Zip Water UK
Trafalgar House
Rash's Green, Dereham,
Norfolk NR19 1JG

0345 6 005 005 | sales@zipindustries.co.uk

specify.zipwater.co.uk

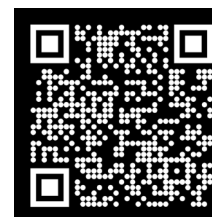

Australia

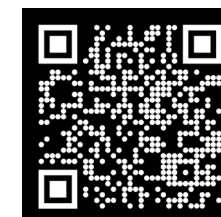

UK

Visit our website to download the manuals

Using these instructions

Please refer to all safety and installation requirements detailed in the Quick start guide provided with the HydroTap Command Centre, and HydroTap Command Centre installation instructions found online, prior to installation of, or any change to, the complete system.



WARNING



Read the instructions

Before commencing the installation, download & read the HydroTap Command Centre installation instructions

Tools needed for tap installation (not supplied)
In addition to normal tools, the following (or equivalent equipment) will be required.

- 35mm diameter sheet metal hole punch for sinks.
- 35mm diameter hole saw for worktops.
- Tube spanner for fixing the tap assembly.



Be aware of the risks of hazards which could cause harm when using tools. Assess the risks before starting the installation.

Water supply pressure requirements


	Min - Max pressure, kPA (bar)	
	Australia	UK
HydroTap	170 (1.7) - 700 (7.0)	170 (1.7) - 500 (5.0)
Sparkling HydroTap	250 (2.5) - 700 (7.0)	250 (2.5) - 500 (5.0)
Booster	200 (2.0) - 700 (7.0)	200 (2.0) - 500 (5.0)

1 Positioning

Position the tap such that it dispenses into the sink bowl with clearance for a cup or tea pot.




Ensure that taps are positioned to minimise the risks of scalding by dispensing boiling water while using the tap.

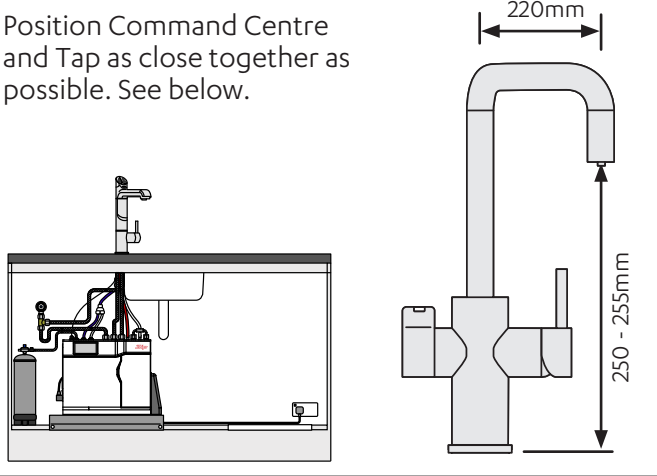


2 Familiarise yourself with the mains connections

Chilled sparkling model shown

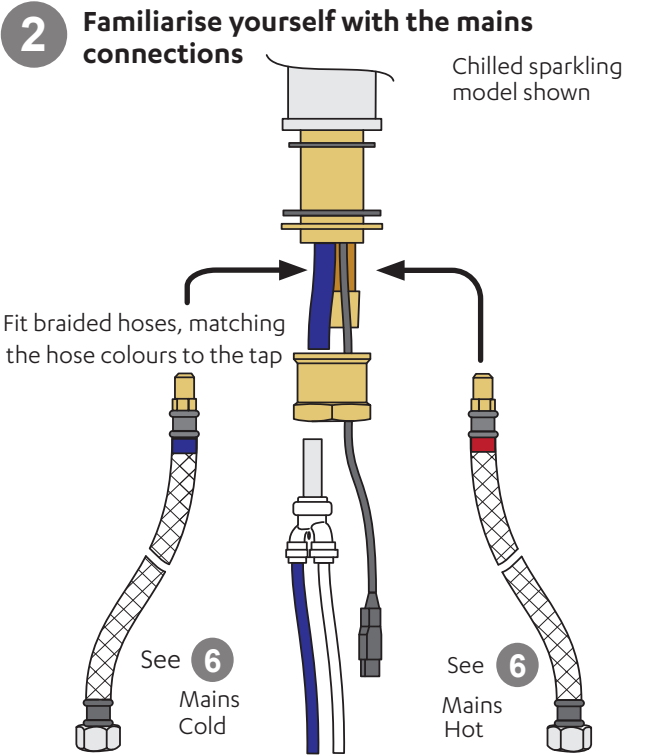


3 Familiarise yourself with the tap connections

Boiling models

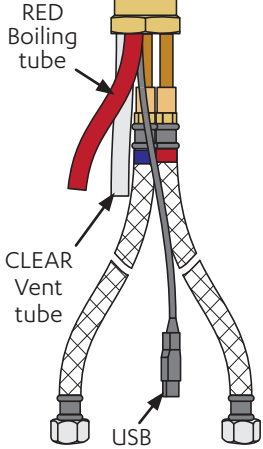

RED Boiling tube
CLEAR Vent tube
USB

Sparkling models

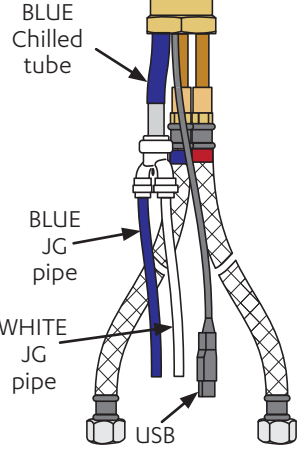

BLUE Chilled tube
BLUE JG pipe
WHITE JG pipe
USB

4 Cut the hole



Ø35mm

- Cut a Ø35mm hole in the worktop / sink.
- Make sure the tap location will allow the tap spout to drain into the sink.

5 Mount and secure the tap

